

MiniMerc™

User's Guide



Assistive Technology, Inc.

Assistive Technology, Inc. has made every effort to ensure that the information in this manual is accurate; it is not responsible for printing errors. The information in this document is subject to change without notice and does not represent a commitment on the part of Assistive Technology, Inc. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the written permission of Assistive Technology, Inc. Your rights to the software are governed by the accompanying software license agreement.

© 2003–2006 Assistive Technology, Inc. and its licensors.

All rights reserved.

Printed in the United States of America.

MiniMerc and the Assistive Technology, Inc. logo are trademarks of Assistive Technology, Inc. Microsoft, Microsoft Internet Explorer logo, Windows, Windows logo, Windows Start logo, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Quicktime is a trademark used under license. Boardmaker and Speaking Dynamically Pro are registered trademarks of Mayer-Johnson LLC. Discover is a registered trademark of Madentec Limited. All other trademarks are owned by their respective companies.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Assistive Technology, Inc. assumes no responsibility with regard to the performance or use of these products.

Address all correspondence to:

Assistive Technology, Inc.

333 Elm Street

Dedham, MA 02026

Telephone: 781.461.8200

Toll-free: 800.793.9227

Fax: 781.461.8213

Web: www.assistivetech.com

E-mail: customercare@assistivetech.com

How do I get started with MiniMerc?

Use the information in this book to set up your MiniMerc and use it most effectively.

Getting Started:

- 2 Features and setup
- 6 Learning the basics
- 11 Mercury Control Panel
- 16 Turning off and restarting MiniMerc
- 17 Using the CD-ROM drive
- 19 Software overview
- 20 MiniMerc's remote control features
- 24 Connecting to the Internet
- 26 Handy Tools for Speaking Dynamically Pro and Boardmaker

MiniMerc Access Features:

- 27 Choosing an input device
- 28 Windows® On-Screen Keyboard
- 30 Calibrating the touchscreen
- 32 Switches
- 34 Wheelchair/Joystick switch input
- 36 Connecting peripherals
- 37 Windows Control Panel
- 38 Setting up a MiniMerc desktop for easy access

General Information:

- 40 MiniMerc power options and battery
- 42 Troubleshooting
- 44 Maintenance and safety guidelines
- 47 Technical information



What built-in features does MiniMerc have?

Power Button

Turn MiniMerc on or reset it.

Status LED

Blinks when MiniMerc is charging or in Stand By mode.

Headphone/Preview Jack

Plug in headphones here.

Switch 1-2 Jack & Remote Power On

Plug in a single-switch, dual-switch, or a splitter here.

Wheelchair/Joystick port

 
For joystick input from a multi-switch or wheelchair ECU. Requires a MiniMerc wheelchair cable. See page 34 for more information.

USB Ports 1 and 2


Plug in peripherals like your mouse, keyboard, or external drives here.

AC Power Adapter/Battery Charger Port

Plug in your AC Power Adapter here.

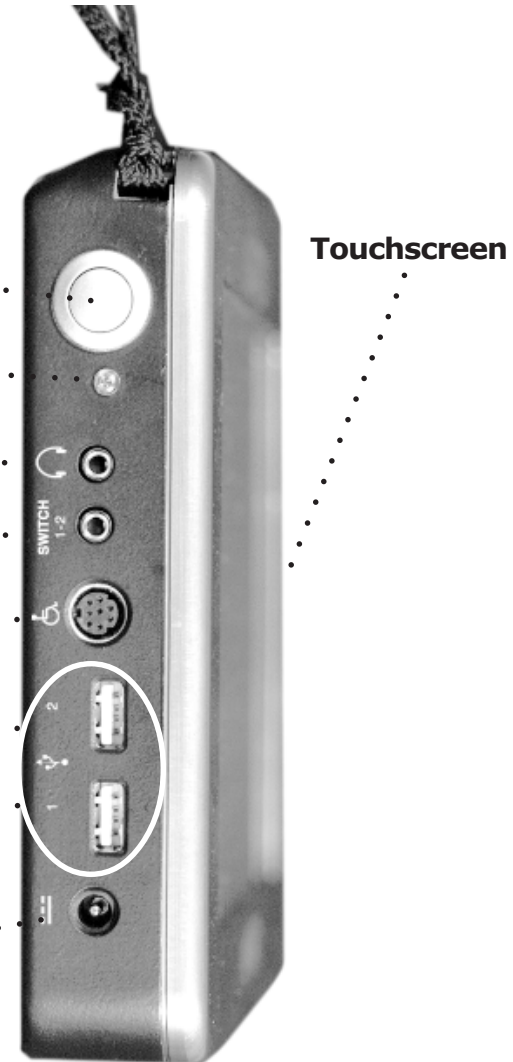

What other features does MiniMerc have?

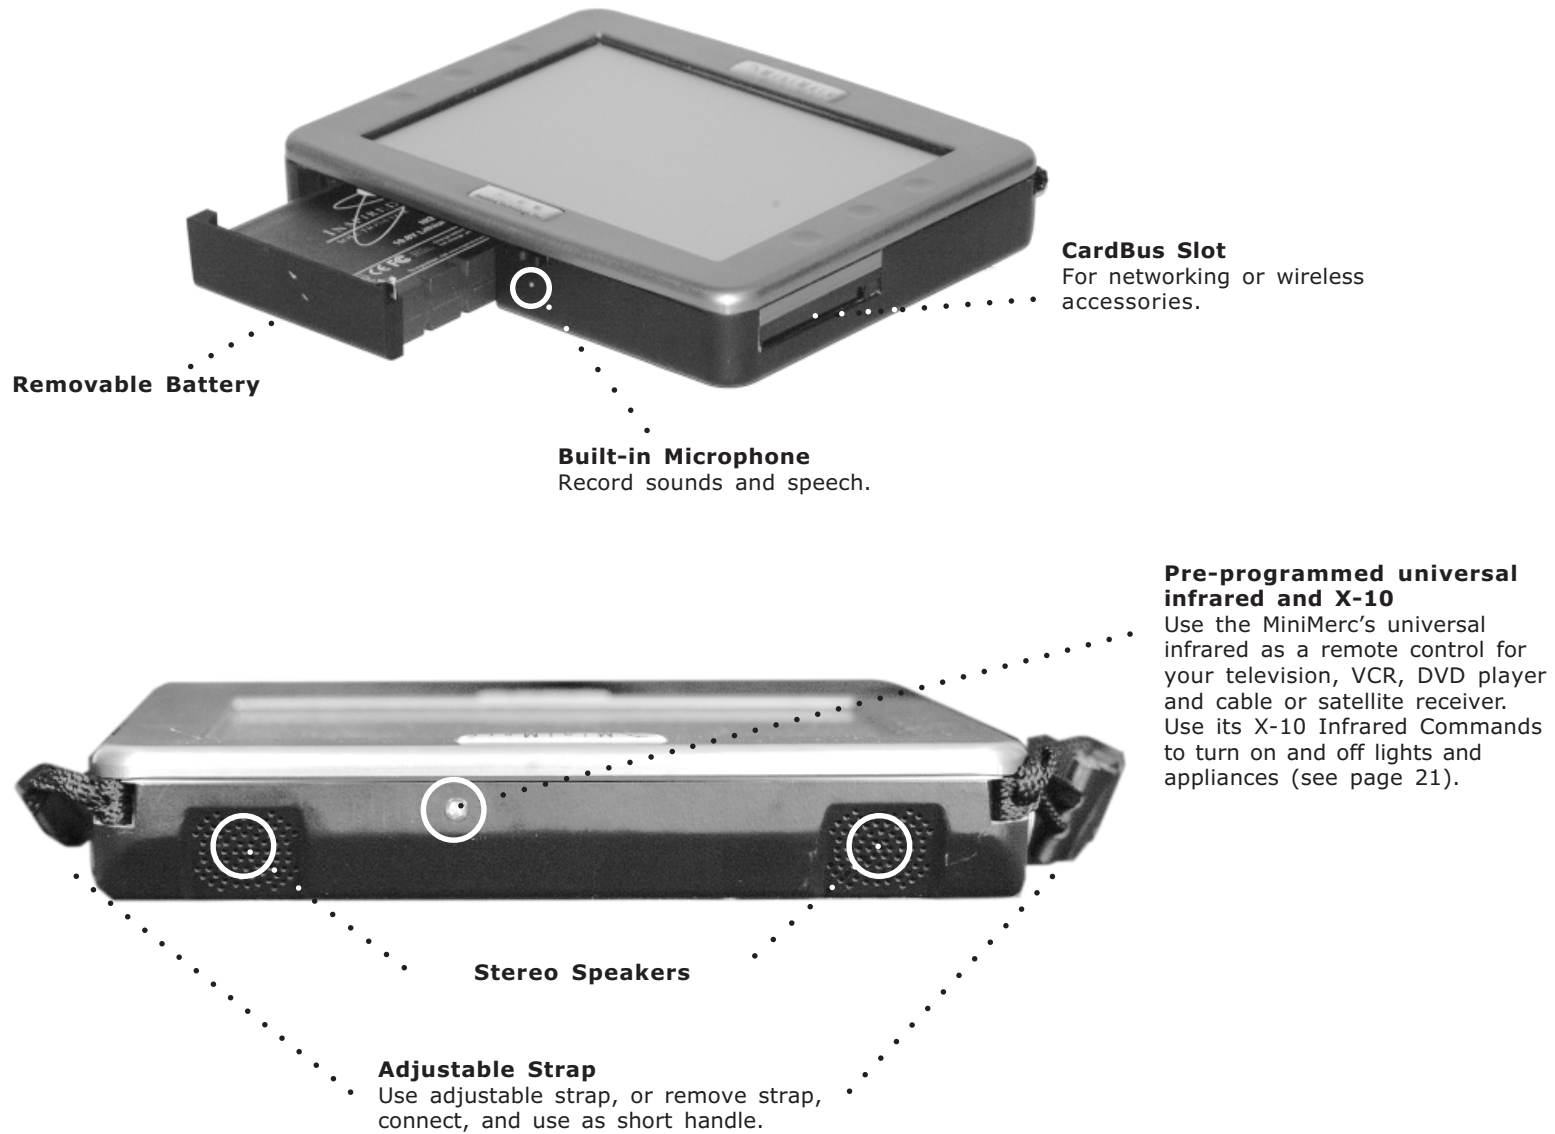 

How do I set up and turn on MiniMerc?

- 1** Attach the power cord to the AC Power Adapter, then plug the power cord into a wall socket or power strip.
- 2** Plug the AC Power Adapter into the AC Power Adapter/Battery Charger Port on the bottom left side of MiniMerc.

- 3** Press the Power Button on the side of MiniMerc to turn it on.

Be sure that nothing is touching the screen while the MiniMerc is starting up.



How do I use a keyboard and mouse?

The keyboard and mouse each plug into a USB port on the left side of the MiniMerc. You can safely plug and unplug these peripherals while MiniMerc is on. They are handy to use when installing new software, editing communication boards, or using the Internet.

An on-screen keyboard is also available. Refer to page 28 for more information.




How do I get started?

After you turn on the MiniMerc, you will see the *Windows*® Taskbar at the bottom of your desktop. You can access all of your programs, files and settings from the *Start* menu on the Taskbar.

After you click on the **Start** button, the **Start** menu will appear.

Click on shortcut buttons to start Microsoft® Outlook Express or Microsoft® Internet Explorer and frequently used applications.

Click on **All Programs** to start other programs not listed above, on the **Start** menu.

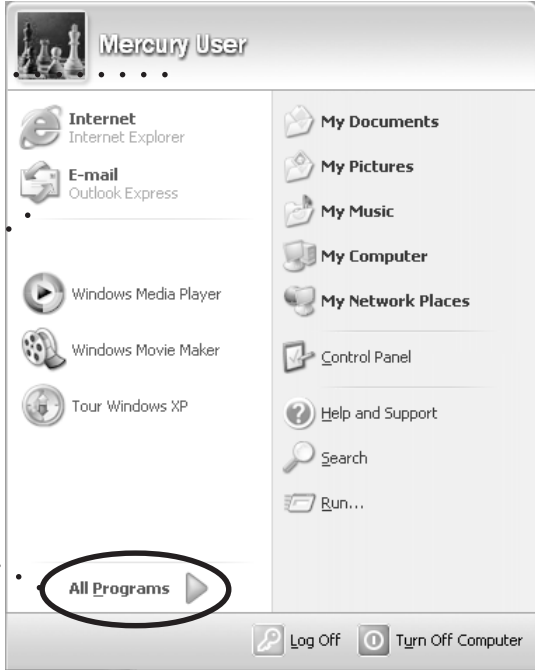

When you turn on your MiniMerc, the Mercury Control Panel will load and will always be available on the Taskbar (see below).

From the Control Panel you can launch software applications; adjust the MiniMerc speaker and headphone volume, brightness of the display, the touchscreen and switch inputs; and put your MiniMerc in Stand By mode or shut it down.

 
For details about the Mercury Control Panel, see page 11.

Taskbar

The name of the Control Panel button on the Taskbar changes to "Battery ____%" (the percentage of battery power currently available) when the battery is installed.

Where can I learn about basic Windows® skills?

If you need help with basic Windows concepts, such as clicking and using files and folders, choose the *Tour Windows XP* shortcut button from the *Start* menu (you can also get to this tutorial by choosing *All Programs*, then *Accessories*). After the introduction, click on the *Windows XP Basics* button and follow the instructions.

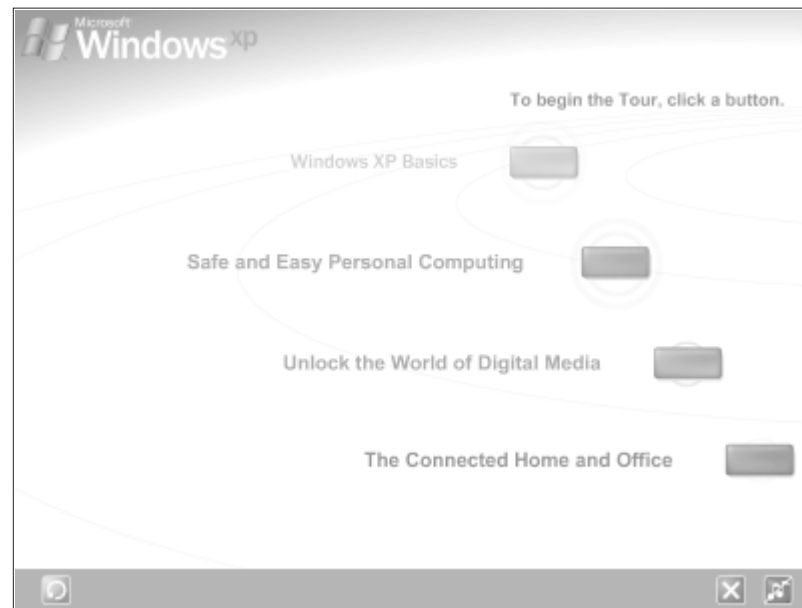


Where do I go to learn more?

Choose *Help and Support* from the *Start* menu. The *Help and Support Center* window appears, with a variety of tools to help you solve a problem or learn more about a Windows feature. Choose a topic from the *Pick a Help topic* column, or type key words in the *Search* box. Click on any of the topics that appear. If you didn't find the information you needed, enter different key words.

For information on a specific Windows program while that program is active, press the F1 key or click on the *Help* menu at the top of the window. Select *Help Topics*.


 
Another way to request help is to right-click the mouse on a window to bring up a *What's This?* button. Click on the *What's This?* button for hints on using a particular Windows feature.

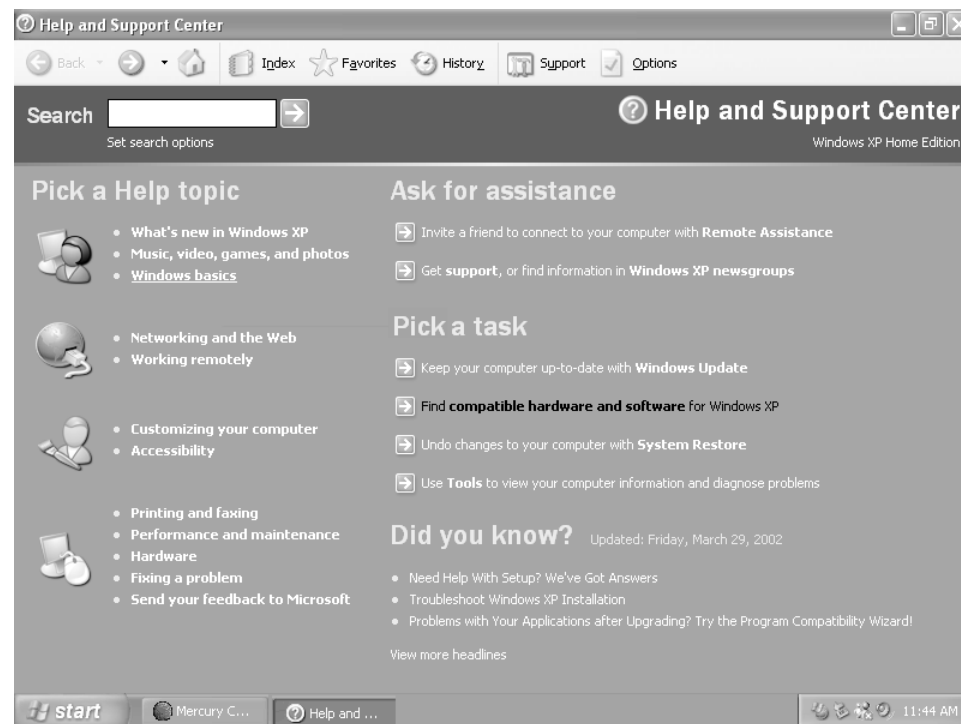


How do I find something on the MiniMerc hard drive?

1 Select *My Computer* on the *Start* menu.

  2 Double-click on a folder to view its contents.

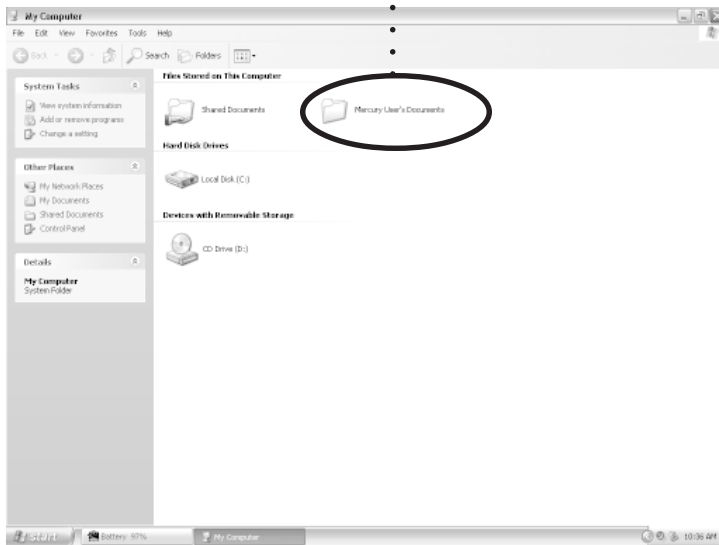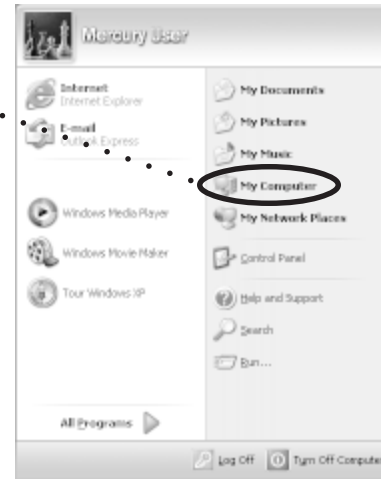

 Alternatively, click *My Documents* on the *Start* menu. Click the *Search* button at the top of the window that appears. Make a selection from the left pane to begin your search.

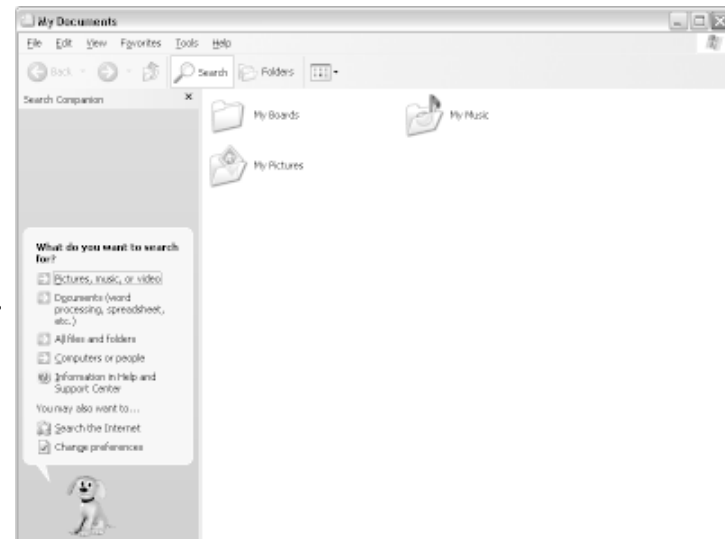

How do I switch between programs that are open?

 
Speaking Dynamically Pro and Windows Media Player are the open programs in this example. To switch to a different program, click anywhere on the window of that program.

The Taskbar lists all programs that are currently running. If a program is running but its window is minimized or covered by other windows, click on its button on the Taskbar to switch to it.



What is the Mercury Control Panel?

The Mercury Control Panel provides access to a variety of MiniMerc features and controls.

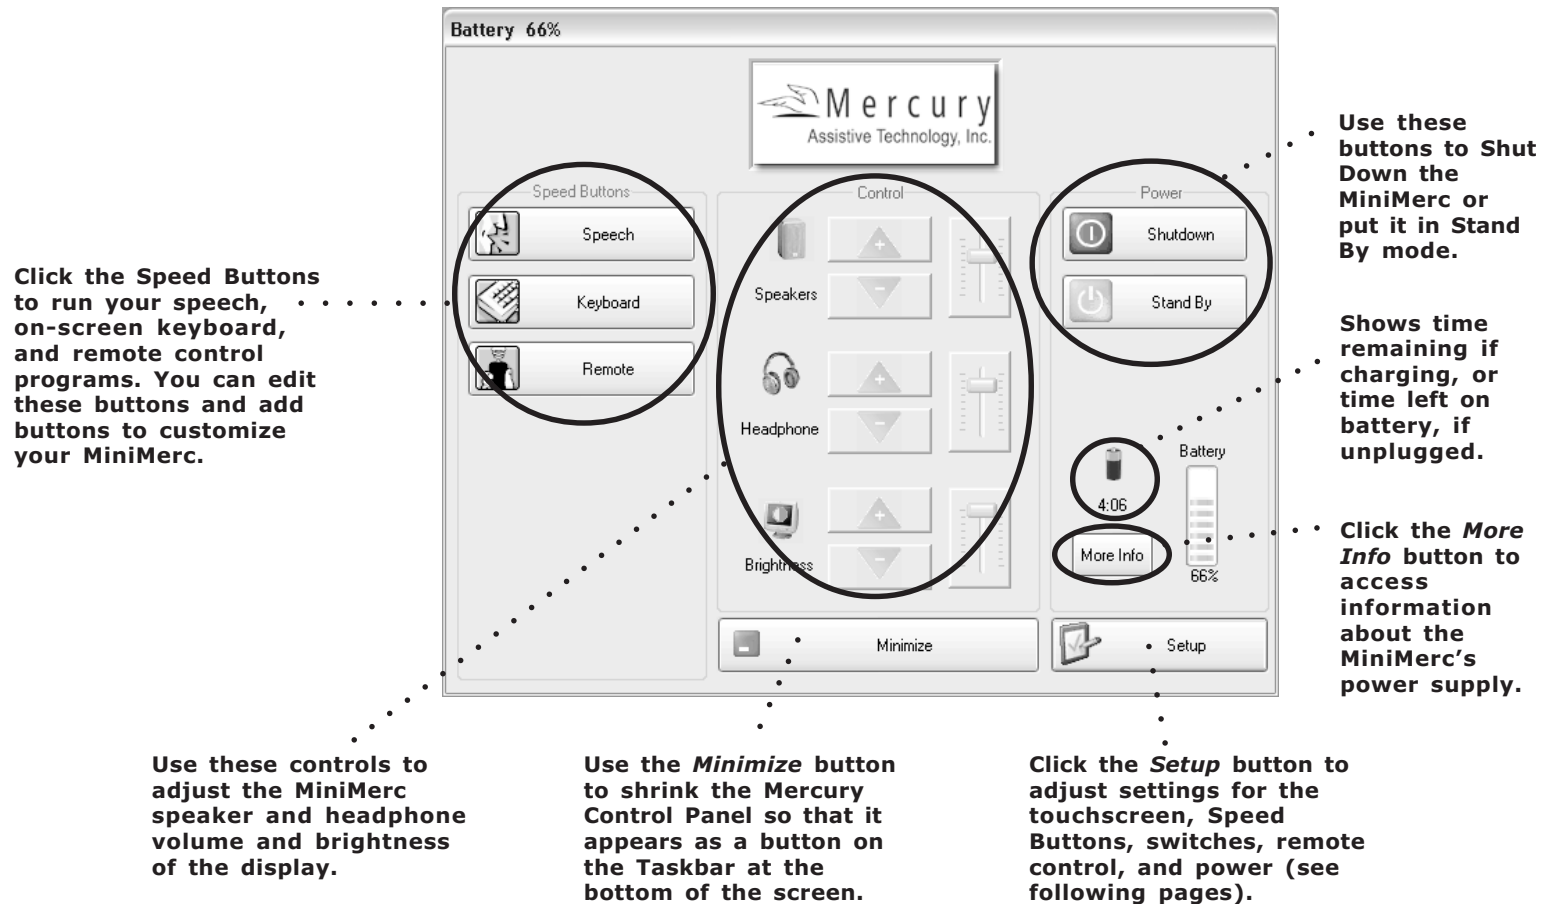

continued on the next page

If you click the *Setup* button on the Mercury Control Panel, you will see the Main Setup screen.

Click on the tabs below to switch to different setup screens.

For Speed Buttons, see p. 13.
For Switches, see p. 32.
For Remote Control, see p. 20.
For Power, see p. 40.

Use this check box to restrict access to Setup options by requiring a keyboard to type <Alt-S>.

Use this check box to restrict access to Setup options by requiring a password (entered at the right).

Type the same password in both boxes, then click **Set Password**. This password will be required to enter this Setup screen. Be sure to keep a record of your password in a safe place.


Turn headphone preview on or off (see page 37).

Click to calibrate the touchscreen (see page 30).

Click **OK** to keep these settings and exit Setup.

Click **Cancel** to exit Setup without keeping changes.

Click **Apply** to keep these settings and continue in Setup.

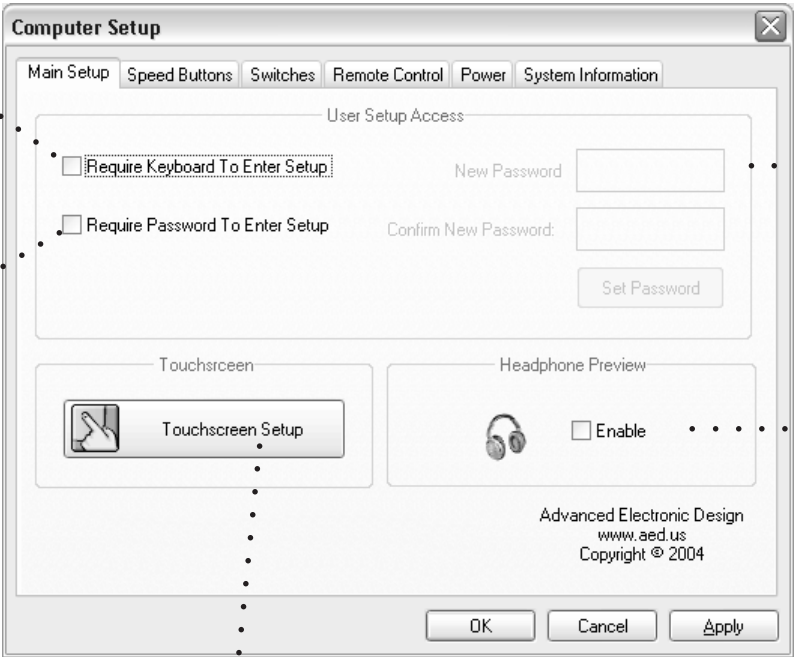


The screenshot shows a 'Computer Setup' window with several tabs: 'Main Setup', 'Speed Buttons', 'Switches', 'Remote Control', 'Power', and 'System Information'. The 'Main Setup' tab is active. It contains a 'User Setup Access' section with two checkboxes: 'Require Keyboard To Enter Setup' and 'Require Password To Enter Setup'. To the right of these are two password input fields labeled 'New Password' and 'Confirm New Password', followed by a 'Set Password' button. Below this is a 'Touchscreen' section with a 'Touchscreen Setup' button featuring a hand icon. To the right is a 'Headphone Preview' section with a headphones icon and an 'Enable' checkbox. At the bottom right, it says 'Advanced Electronic Design www.aed.us Copyright © 2004'. At the bottom are 'OK', 'Cancel', and 'Apply' buttons. Dotted lines connect various elements in the window to explanatory text blocks around it.

How can I customize the Speed Buttons in the Control Panel?


This Setup screen allows you to add or remove Speed Buttons to customize your MiniMerc. You can have up to 6 Speed Buttons in a group, and any of the buttons can link to other groups, giving you an unlimited number of possible Speed Buttons.

 - 1** Click the **Setup** button on the main screen of the Mercury Control Panel, then the **Speed Buttons** tab.
- 2** To add a new button to the Home group, click the **Edit** button next to the first empty button.
- 3** In the **Button Editor**, you can create the button's appearance and choose whether the button will launch a program or link to another button group. The screen below shows how to set up a Speed Button that launches the Wordpad accessory.

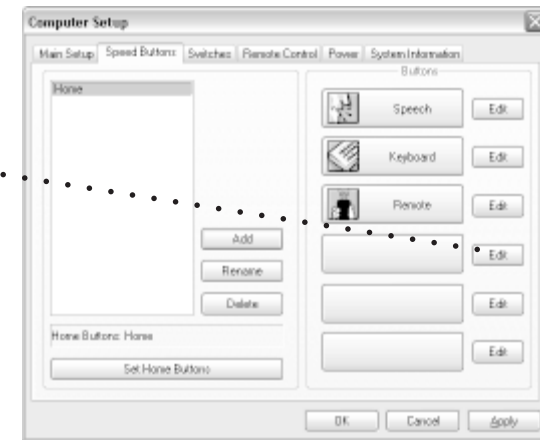

Enter the name you want displayed on the Speed Button.

 Choose an icon for the Speed Button: no icon, the icon associated with this program, or any custom icon (.ico) file.

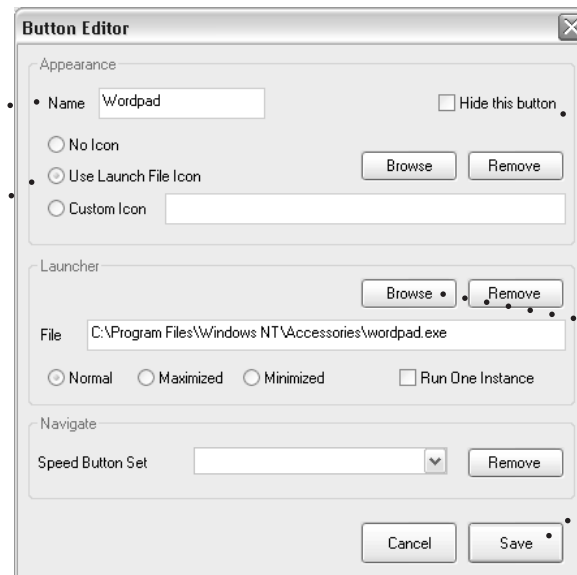


You can hide or show any Speed Button.

Browse to locate the program to launch from this Speed Button.

Be sure to save your changes.

continued on the next page

 
You can create a Speed Button that links to another group of Speed Buttons. Below is an example of a Speed Button group of games.

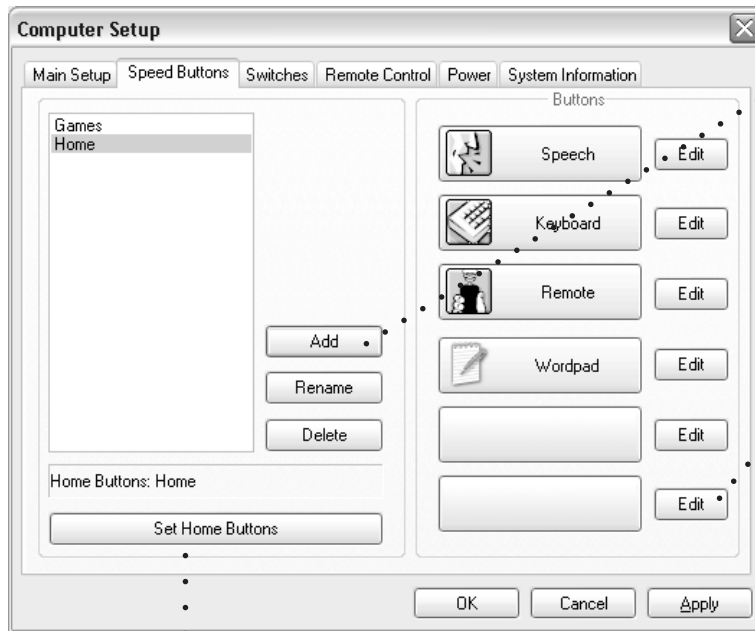

Use this button to make the selected group (above) be the Home group, which will appear on the main screen of the Mercury Control Panel whenever you turn on your MiniMerc.

1

 Click the Add button to create a new group. In this example, the group is named Games.

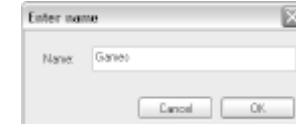

2

 
Add a Speed Button to the Home group that will link to Games. To do this, click the *Edit* button.

3

In the Button Editor, type the name Games and choose an icon for the button, if desired.


4

Under Navigate, select Games as the Speed Button Set that this button will switch to.

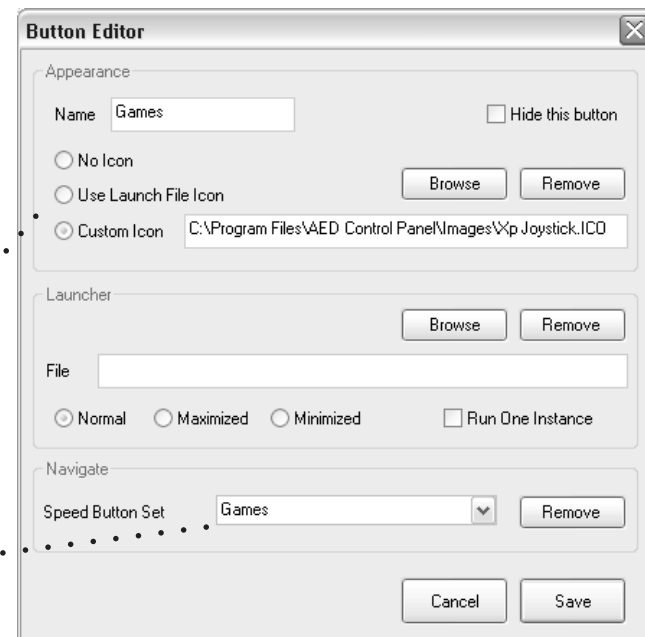

5 Click the new Games group, then add buttons for your Games using the same method described in the Wordpad example on page 13.

 
Click **OK** and save the changes to your Games and Home button groups.

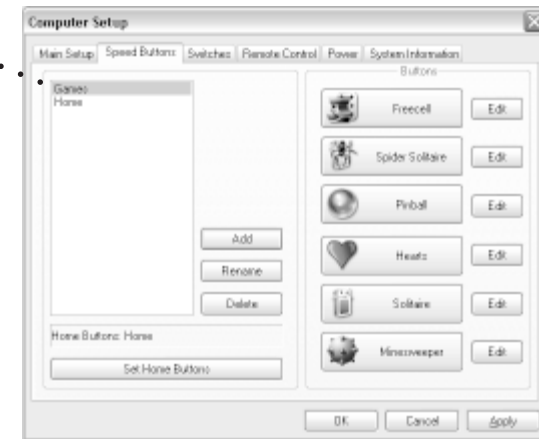

Try out your new Speed Buttons.

Click the Wordpad button to launch Wordpad.

 When you click the Games button, the new Speed Buttons for Games will appear.

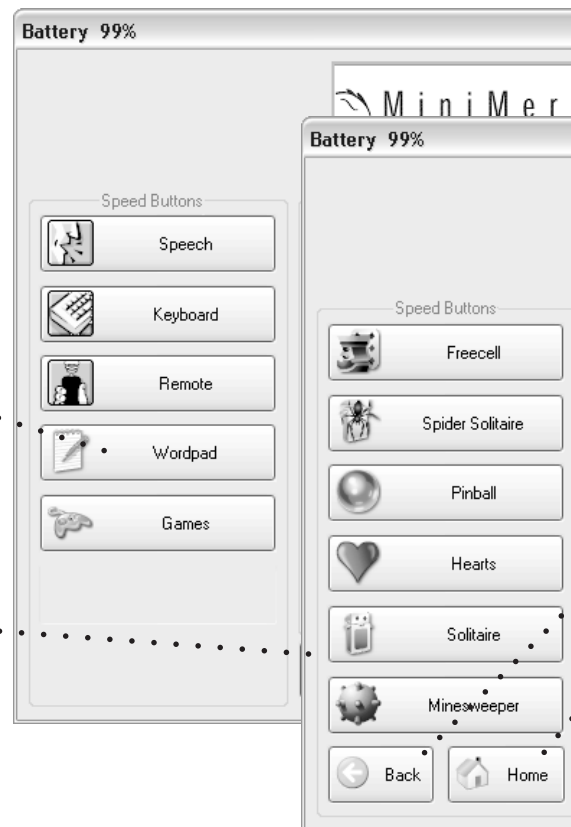


Click the **Back** button to go to the previous button group.

Click the **Home** button to return to the Home group.

In this example, both buttons will return you to the Home group.

How do I turn MiniMerc off?

 - Use the *Shut Down* button on the Mercury Control Panel to turn off your MiniMerc. Use the *Stand By* button to put it into Stand By mode.
- Use Stand By mode when you leave MiniMerc for a short time. MiniMerc uses very little power in Stand By mode, so you increase the amount of time you can operate MiniMerc on its battery. In Stand By mode, the MiniMerc screen will go blank, and the status LED will blink green.
- To wake MiniMerc, press the Power button or a switch plugged into the Switch 1-2 jack. The desktop will look as it did before it went into Stand By mode.
- Use Shut Down when you plan to leave the MiniMerc for longer periods of time, or you can enable Hibernate in the Power Setup tab (see p. 40). When MiniMerc has been shut down, the screen will be dark, and the status LED will not blink (unless MiniMerc is charging while AC is connected).
- You can also select *Turn Off Computer* from the Windows *Start* menu, then choose *Stand By*, *Turn Off*, or *Restart*.

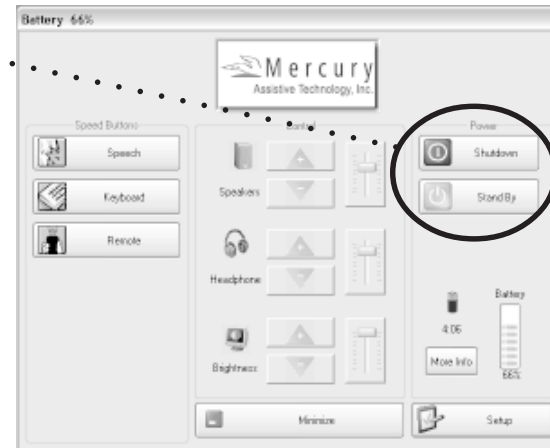

How do I restart MiniMerc?

 
- Use Restart to shut down and then immediately restart MiniMerc. Use Restart to get a fresh start when you are experiencing problems, or after you have installed new software. Select *Turn off Computer* from the Windows *Start* menu, then choose *Restart*.
- You can also reset MiniMerc by depressing the Power button for several seconds until the MiniMerc shuts down. Then press the Power button again to start up.



How do I use the CD-R/RW drive?

MiniMerc comes with an external USB CD-R/RW drive and AC adapter. You can use it to run or install software, make backup copies of your important files, or play music CDs.

Plug in the AC adapter and set the switch on the back of the drive to "EXT". Then connect the drive to MiniMerc by plugging the large end of the cable provided into center of the back of the CD drive and the small end into one of the MiniMerc USB ports.

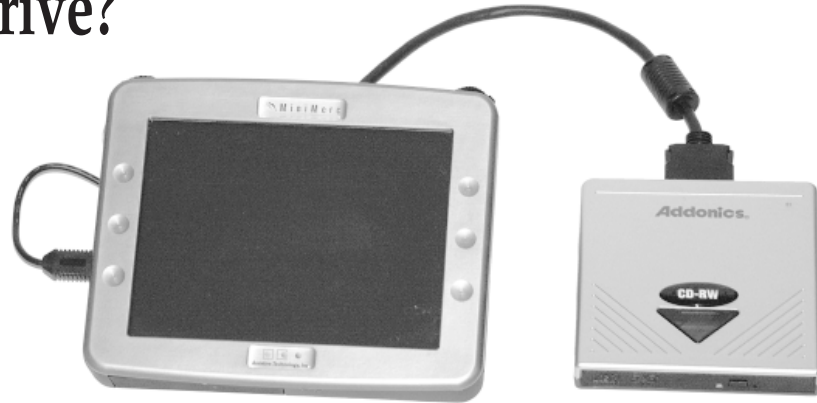

To open the CD drive, press the eject button on the front. Place a CD on the tray (label-side up) and then align the hole in the disc directly over the round clip in the center of the drive. Press down until you feel the disc snap into place. Close the tray gently until it latches.

To eject the CD, press the eject button on the CD drive door and pull the tray open.

To run or install software from CDs:

- 1** Attach your external keyboard. Many programs will require you to register information or serial numbers during installation.
- 2** Most installations will automatically start. Then follow the on-screen instructions.
- 3** The installation program may instruct you to restart your computer at the end of the installation process. Often it will restart the computer for you.

To play music CDs:

Insert a music CD into the CD-ROM drive. Windows Media Player will automatically begin playing the music CD.

To play DVDs:

You can play DVDs on the CD drive using the optional Cardbus Cable. For more information or to purchase this cable, please contact ATI Customer Service at 800-793-9227.

 
To make backup copies of files:

Please follow the directions on page 18.

To make backup copies of your files and folders to a CD:

You will find it easy and convenient to make backup copies of your data files to a CD using the CD Writing software in Windows XP and blank CD-R or CD-RW discs that you purchase.


- 1 Place a blank CD disc in the CD drive. In the dialog box that appears, click **OK** to open a writable CD folder using Windows Explorer.

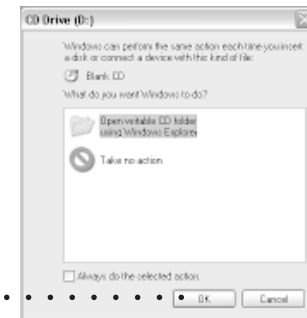

- 2 Drag the files and folders you wish to copy to the CD from your MiniMerc to the CD drive folder.

Names of files appear here.

 - 3 After you have selected the files and folders to copy, they will appear in the CD drive window. Open the CD Writing Wizard by clicking on **Write these files to CD**.

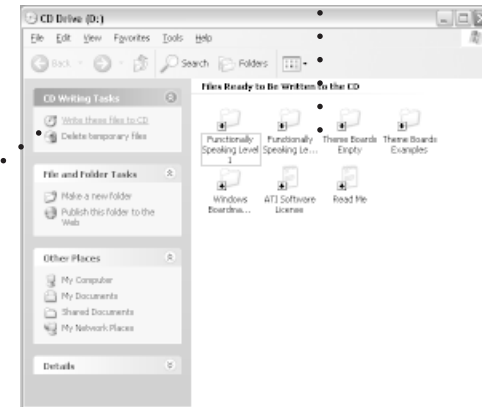

- 4 Type a name for the CD and click **Next**. Follow the on-screen instructions to write the files to the CD.

If you are using a CD-RW disc, you can add more files to the same CD at a later time, as long as there is enough space on it.

Note: You cannot write files to a blank DVD disc.



What software is included with MiniMerc?

MiniMerc comes with a variety of software installed. Some functions of these programs may require mouse and keyboard. You may need additional software for your particular input method to work with them.

Microsoft® Internet Explorer—browser software that gives you access to the World Wide Web. You need to set up an account with an Internet Service Provider (ISP) before you can go online.

Microsoft® Outlook Express—e-mail software that lets you maintain and access your e-mail account. You need to set up an account with an ISP before you can send or receive e-mail.

QuickTime™—software for viewing pictures and movies and playing synchronized graphics, sound, and music.

Windows Media Player™—software for playing music CDs and other media.

Windows Messenger—software for sending instant messages to other users who have signed up for MSN Messenger Service.

Windows On-Screen Keyboard—on-screen version of an external keyboard that lets you enter text and access system functions using the touchscreen, mouse, switch or alternative pointer.

Windows Movie Maker—software for editing movies from video cameras.

Functionally Speaking—a set of Speaking Dynamically™ Pro theme-based communication boards and two levels of functional language boards developed by Assistive Technology, Inc., located in the *My Boards* folder under *My Documents*. A User's Guide in Portable Document Format (PDF) file is also provided in this folder.

MiniMerc Remote Control boards—a set of six Speaking Dynamically Pro boards located in the *SDP Sample Boards* folder in the *My Boards* folder under *My Documents*. These boards have MiniMerc remote control functions pre-programmed and are designed to be linked to your own SDP communication boards. For help on linking SDP boards, see the User's Guide for Boardmaker with Speaking Dynamically Pro from Mayer-Johnson LLC.

If you purchased a Communication Software Set, the following software will also be installed:

 
Boardmaker™ with Speaking Dynamically™ Pro—a symbol and speech output communication program and display maker, with over 3000 Picture Communication Symbols.

How do I set up MiniMerc's remote controls?


Before you use the MiniMerc Remote Control for the first time, you will need to set up the remote control codes for the particular television, VCR, cable system, DVD player, or satellite system you have. You can set up multiple rooms, each with different devices.

1 Click the **Setup** button in the Mercury Control Panel (see page 11), then click on the **Remote Control** tab.


2 Click the **Add** button to add a room. Type a name for the room in the small window that opens.

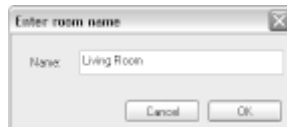

 3 Highlight the room name at the left and click the **Add Device** button.

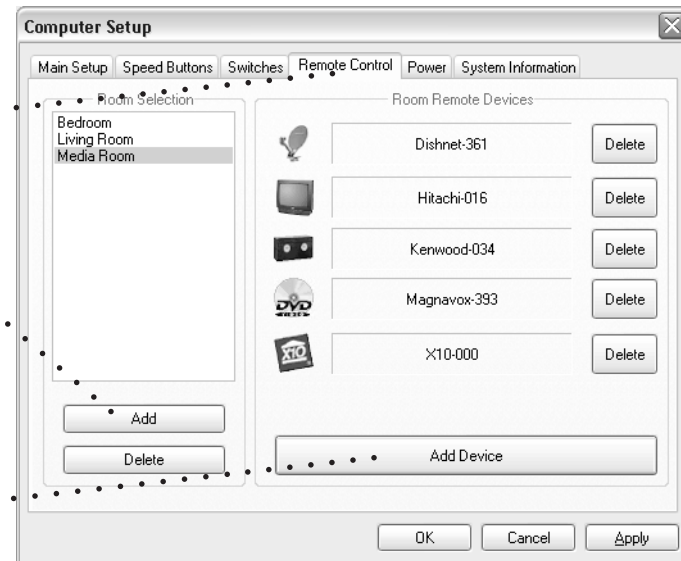

 4 In the window that opens, select a device type from the left column, then choose the manufacturer of that device from the second column.

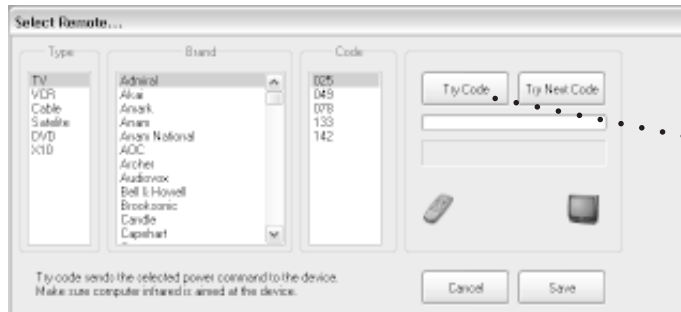

5 Aim the infrared transmitter (on the top of the MiniMerc) at the device and click the **Try Code** button. The correct code will turn the device on or off. If the first code does not work, press the **Try Next Code** button, testing each code sequentially until you find the one that turns your device on or off.

How do I use MiniMerc's remote control features?

 
To use MiniMerc's remote controls, click the Speed Button for *Remote* on the Mercury Control Panel (see page 11).

1 Click the *Change Room* button to select the room you are in.

2 From the choices at the top of the *Remote Control* window, click on the device you want to control.

3 Click the buttons on your MiniMerc's "virtual" remote to operate the device. The buttons that are available depend on the type of device. For example, the Television button set does not include the VCR controls.

X-10 allows you to control lights and appliances using MiniMerc's infrared emitting capabilities with an X-10 Infrared Command Center and additional equipment (not included). Please contact Assistive Technology, Inc. for more information (800-793-9227).

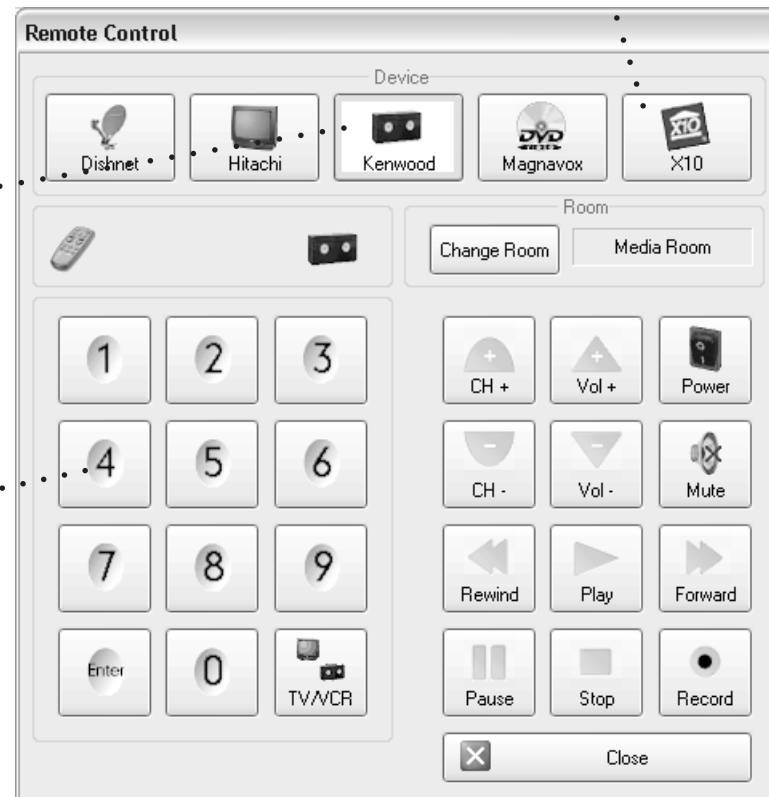


How do I program other applications to use MiniMerc's remote control?

All the actions for MiniMerc's remote control buttons, as well as the actions for the Mercury Control Panel buttons for volume, brightness, stand by, hibernate and shutdown, exist as individual files that can be launched from any program capable of launching applications, such as Speaking Dynamically Pro (SDP)*. If you purchased SDP with your MiniMerc, a pre-made set of boards that perform MiniMerc remote control functions is already installed in the *SDP Sample Boards* folder in the *My Boards* folder under *My Documents*.

To create a button action in a Speaking Dynamically Pro board that performs a Mercury Control Panel function:

 - 1** Open the board you wish to modify in Speaking Dynamically Pro and enter Design mode (press <ctrl-D> or choose Design from the Dynamic Boards menu, if menus are showing).
- 2** Double-click the button you want to add the action to.
- 3** In the Action Categories column, click the *Cool Stuff* radio button.
- 4** In the Action Menu, select *Launch Application*.
- 5** Choose the command you want the button to launch, then click OK.

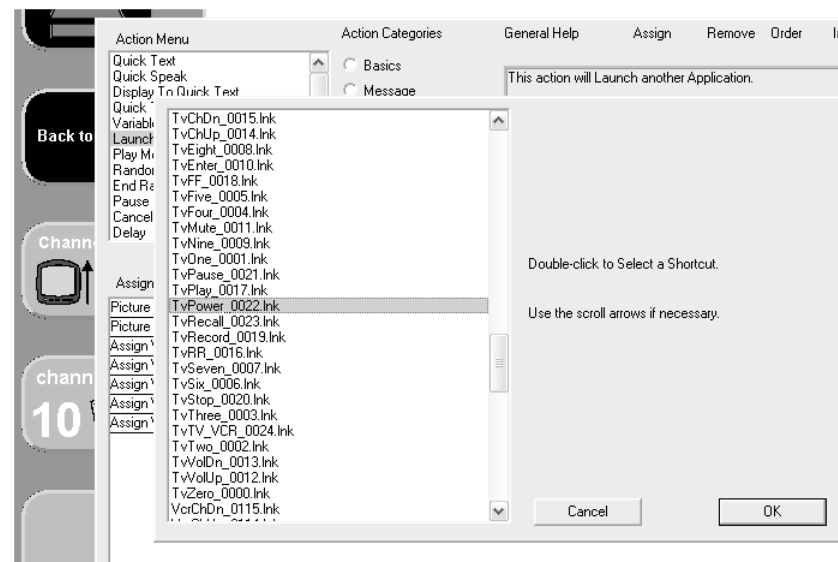

* The files for these actions are located in the folder:
C:\Program Files\AED Control Panel\Control Modules

Selecting Multi-digit Channels with Speaking Dynamically Pro®

Entering a two- or three-digit channel number (any channel number above 9) typically requires careful timing in order to be successful. For example, if you want to enter channel 56, and pause for too long between pressing the 5 and pressing the 6, your device may change first to channel 5 and then to channel 6, rather than to channel 56. This may be even more difficult for switch users when scanning from one digit to the next. The process described below makes sending multi-digit channel commands simpler and faster.

How to create a multi-digit channel command:

1. Navigate to the SDP Externals folder.
 - a. Click the Start menu and select “My Computer”.
 - b. Double-click “Local Disk (C:)”.
 - c. Double-click the “Program Files” folder.
 - d. Double-click the “Boardmaker with Speaking Dynamically Pro” folder.
 - e. Double-click the “SDP Externals” folder to open it.
2. Depending on the media device you will be using, click one of the following four files (you may not see the .vbs extension):

■ TV_201.vbs	■ Cable_201.vbs
■ VCR_201.vbs	■ Satellite_201.vbs
3. From the Edit menu, select Copy.
4. From the Edit menu, select Paste. (This duplicates the original file, so you can make additional multi-digit channel commands.)
5. From the File menu, select Rename. Type the desired channel number in place of ‘201’ in the filename.

For example, to make a command file to change the TV channel to 56, rename the file ‘TV_56’ (or ‘TV_56.vbs’).

Note that the filename should begin with the name of the device you are controlling, followed by an underscore character (_), then the channel number. The filename must end with a .vbs extension. If the file extensions are hidden, you don’t need to add the extension. If the extension was there to begin with, then you should keep it.

6. Repeat steps 2 through 5 for each multi-digit channel you would like to access.

If you purchased SDP software with your MiniMerc, a pre-made set of boards that perform remote control functions is installed in the *SDP Sample Boards* folder in the *My Boards* folder under *My Documents*.

Now you can edit individual Boardmaker buttons in these boards for each multi-digit channel you wish to access.

 
 
1. In Design Mode, double-click a button you wish to use to access a channel.
2. Select *Launch Application* from the button’s Action menu, under the *Cool Stuff* category.
3. Choose the file for the channel you wish to access with this button.
4. Switch to Use Mode and try it out!

How do I connect MiniMerc to the Internet?

Remember, you need to be physically connected to the Internet in one of the following ways: CardBus modem connected by wire to a telephone jack, CardBus network card (either wireless, shown below, or connected by wire to an Ethernet jack), or USB-Ethernet adapter. You also need to have an account with an ISP (Internet Service Provider) before you can access the Internet. Your ISP may provide instructions and installation disks. If your ISP does not provide installation materials:

- 1** Open the *Start* menu. Select the *Communications* submenu, and then select *New Connection Wizard*.
- 2** Follow the instructions and answer the questions as they appear.

Note: if you have problems connecting to the Internet, contact your ISP for assistance.

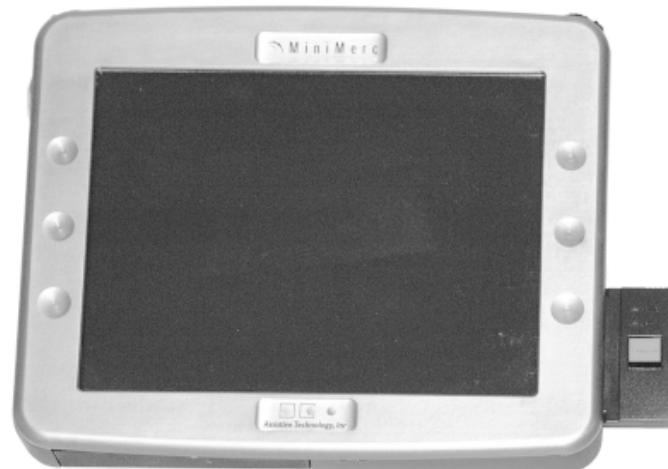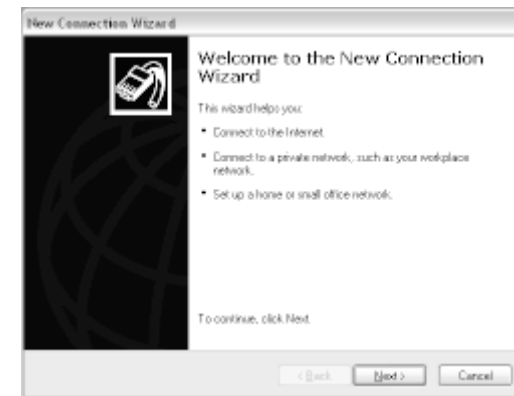

**Wireless modem (optional)
plugged into MiniMerc's CardBus
card slot.**

How do I find something on the Internet?

1 Click on the *Start* menu, then click on the Internet Explorer shortcut.

2 Click the *Search* button, and type what you want to find.



3 A list of Web sites will appear. Click on the link to go to that Web site.

Handy Tools for Speaking Dynamically Pro® and Boardmaker

 
MiniMerc comes with two features that are specially designed for use with Speaking Dynamically Pro and Boardmaker software from Mayer-Johnson LLC. This software is pre-installed on your MiniMerc if you ordered a Communication Software Set or purchased it separately when you ordered your device.

1 Making a Startup Board

This feature allows you to quickly and easily configure any Boardmaker board to load automatically when Windows starts up on your MiniMerc.

To make a board load when Windows starts, right-click on the board's icon, select "Send To", and then select "Startup Folder". When you restart Windows, the board you chose will load automatically.

If you would like to change the startup board, simply follow the instructions above for the new board. Windows' startup settings will be changed to load the new board in place of the old one.

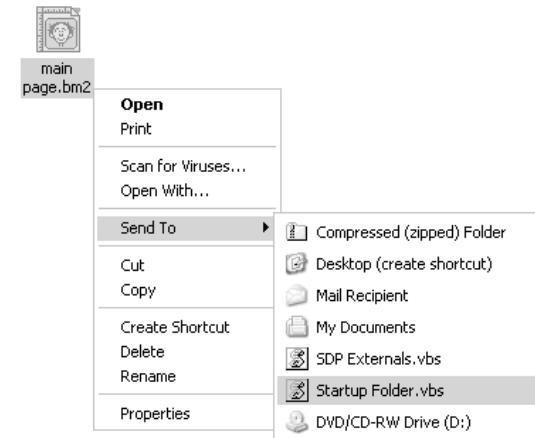


2 Moving a File to the "SDP Externals" Folder

To launch a file from SDPro you need to put a shortcut to that file in a folder called "SDP Externals". This feature lets you quickly and easily create a shortcut to any file and move it to the "SDP Externals" folder.

To send a shortcut for a file to "SDP Externals", right-click on the file's icon, select "Send To", and then select "SDP Externals".

 When you select "Launch Application" from the Boardmaker button action menu, you will see a shortcut to the file with "_shortcut" appended to the filename.

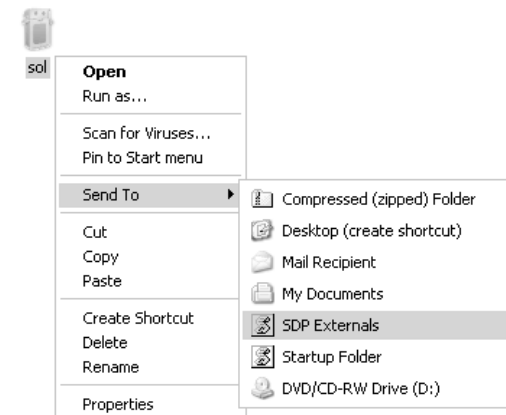

What type of input device should I use?

Who uses a touchscreen? A person who can target objects by direct selection, who cannot attend to both the computer screen and a peripheral device simultaneously, or who cannot associate using a peripheral device with seeing cursor movement on the screen is a good candidate for a touchscreen. Clinicians often use a touchscreen to motivate clients to interact with the computer.

Who uses a switch? A person with very limited movement is a good candidate for a switch. A switch can be mounted to any stable surface and be accessed by any body part with deliberate, discernible movement. Switches come in a variety of shapes and sizes and have varying degrees of sensitivity. The switch inputs on MiniMerc can be set to send any keystroke or mouse click. Switch-accessible software programs expect the switch to emulate a certain keystroke or mouse equivalent. For example, Speaking Dynamically Pro from Mayer-Johnson LLC. expects the switch to act as a mouse click, while other programs might expect the switch to act as the “1” key or the “2” key. Use the Mercury Control Panel (see page 32) to set up the switch(es) to send the correct information to your software program.

Who uses a joystick? A person who uses a joystick to drive a powered wheelchair or who finds the

mouse or trackpad difficult to use due to limited dexterity may prefer to use a joystick as an input device. It allows for direct selection as the user has control over mouse direction and speed. Additional switches may be used for click and drag options.

Who uses an alternative pointing device? A person with limited movement of the upper and lower extremities, but who has controlled head movement, is a good candidate for an alternative pointer.

Who uses a mouse? A person with average visual-motor skills and the ability to attend to the computer screen will be a good candidate for a mouse. Some users can physically access a mouse, but find it challenging to understand the relationship between moving the mouse and cursor movement on the screen. In that case, try direct selection using the built-in touchscreen.

Who uses a keyboard? A person with fine motor skills who can identify target keys either by letter and number or pictures is a good candidate for using a keyboard. Any standard USB keyboard or alternative keyboard such as the IntelliKeys® from IntelliTools, Inc., as well as the Windows On-Screen Keyboard will work with MiniMerc.

 
How do I use the Windows On-Screen Keyboard?

The Windows On-Screen Keyboard can be used in click or hovering (dwell) mode with a mouse or joystick for selecting characters, or can be used in scanning mode using a keyboard or switch input. For best results when accessing the keyboard directly from the touchscreen, use the stylus included with your MiniMerc.


- 1 Click on the *Keyboard* button on the Mercury Control Panel (see page 11).



- 2 At the *Settings* menu on the On-Screen Keyboard, choose *Typing Mode*.

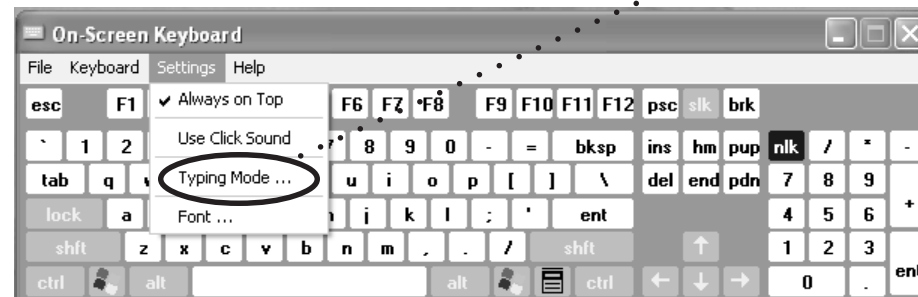

 
- 3** To use the On-Screen Keyboard in hovering (dwell) mode with a mouse or joystick, select *Hover to select*. Adjust the minimum hover time by choosing a number from the *Minimum time to hover* list. (*Click to select* is for direct mouse or touchscreen selection.)

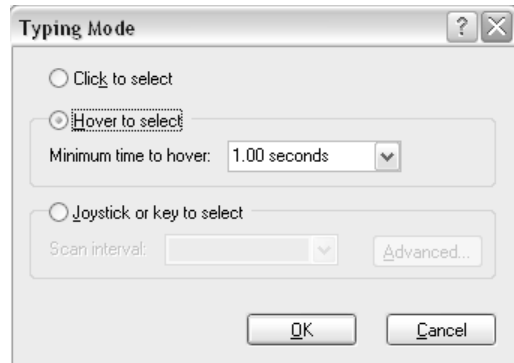

- 4** To use the On-Screen Keyboard in scanning mode with a keyboard or MiniMerc switch input, select *Joystick or key to select*. Choose a number from the Scan interval list to set the scanning speed. Click the Advanced button to select the Keyboard key. Click the down arrow and select <space>.

- 5** To use the On-Screen Keyboard with the MiniMerc switch input, make sure that <space> is selected here and switch 1 is set to <space> in the Mercury Control Panel. (To set up the switch input, see page 32.)

 Even though switch 1 is set to <space>, it does not send a <space> to the application you are using when the On-Screen Keyboard is running. The <space> is only used to communicate with the On-Screen Keyboard.

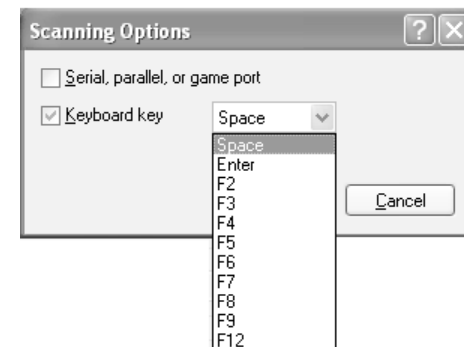

Note: Click on the window of the program you will be typing into (for example, WordPad). The On-Screen Keyboard's keystrokes will not appear if the program is not currently active.

 
 
How do I calibrate the touchscreen?

The touchscreen interprets your touch and moves the cursor where you move your finger. You can adjust or “calibrate” your touchscreen for your individual touch from the Mercury Control Panel. **Note: use your finger or a stylus on the touchscreen; do not use sharp objects that can scratch or puncture it.**

1 Click the *Setup* button on the Mercury Control Panel (see page 11), then in the *Main Setup* tab under *Touchscreen* click *Touchscreen Setup*.

2 Click the *Calibration* tab at the top of the window, then click the large calibration target to start calibration. (The default Calibration Type is 4-point. If this is not appropriate, click *Configure* to change the number of points.)


3 With your finger or a pointer, touch the center of each crosshair as it appears. Keep pressing on each target while the prompt next to it indicates **HOLD**, then stop pressing when the prompt changes to **RELEASE**.

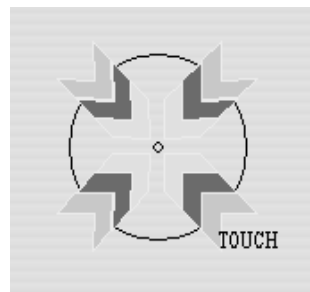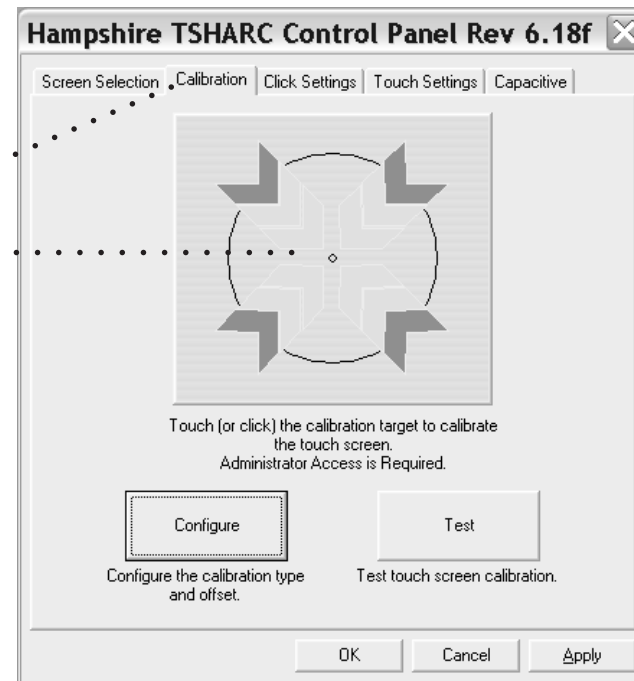


(To exit this screen without recalibrating, simply wait for the time-out indicator at the lower left of the screen to count down.)

Additional Touchscreen Features

 If you need to access right mouse button functions from the touchscreen, click the **Click Settings** tab, and then the **Enable right click emulation** button.

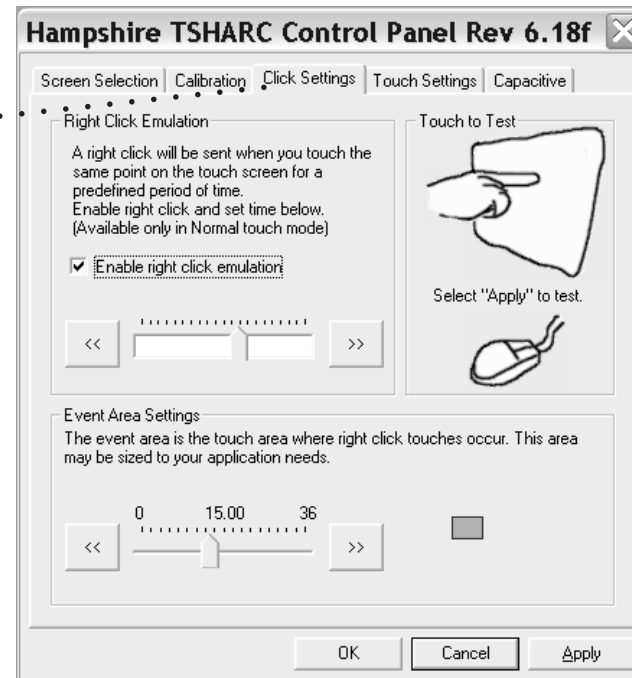

 If you need to change the way the touchscreen responds, click the **Touch Settings** tab, and then choose either **Normal**, **Touch-Down** or **Touch-Up**.

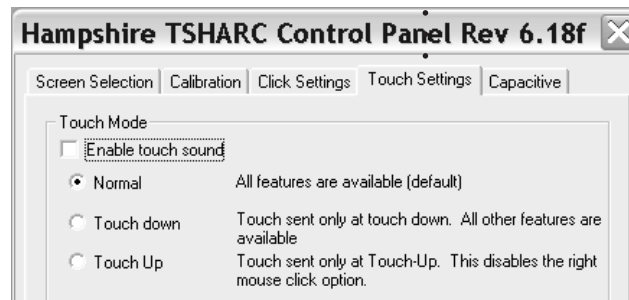

How do I attach a switch to MiniMerc?

To use a single switch (for automatic scanning):

Insert the plug from the switch into the Switch 1-2 jack on the side of the MiniMerc. Click the **Setup** button in the Mercury Control Panel, then click the **Switches** tab and set Switch 1 to the function required by the program you are using. Make sure that Switch 2 is set to Ignore.

To use two switches simultaneously (for dual-switch scanning):

 
Use a dual switch (such as the Rocker switch from Tash, Inc.) and insert the plug into the Switch 1-2 jack on the side of MiniMerc. Or, using 2 single switches, insert the plug from each switch into a “splitter,” then plug the splitter into the Switch 1-2 jack. The splitter (or “Y Adapter”) is available from RadioShack®, and the catalog number is 274-375B. The jacks are color-coded: Nickel for left (Switch 1), and Gold for right (Switch 2).

To use the Wheelchair Joystick input:

See page 34 for information on using a Wheelchair Joystick.

To turn MiniMerc on using a switch:

If you have a single switch attached, you can turn MiniMerc on or wake it from Stand By mode by pressing the switch. If you have two switches attached, switch 1 will turn the MiniMerc on or wake it from Stand By.

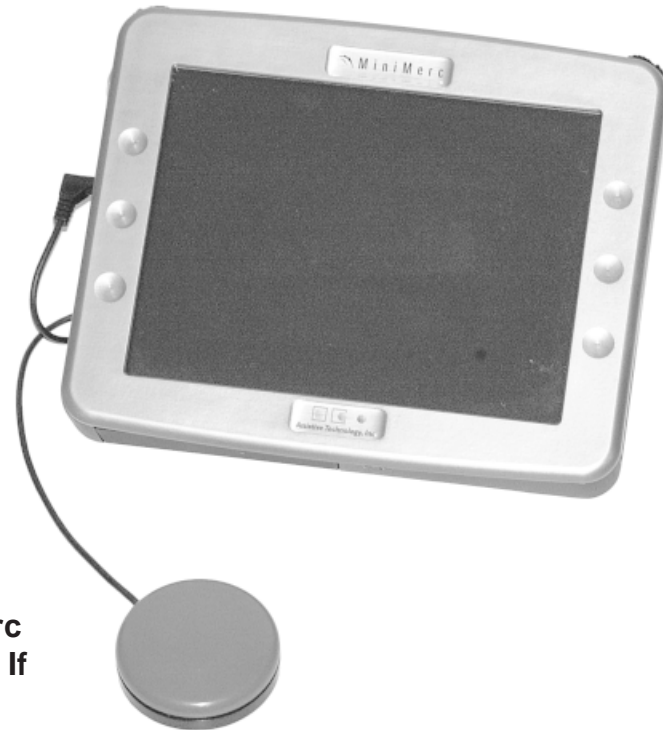


How do I adjust MiniMerc to work with a switch?

A switch connected to the MiniMerc normally acts like a mouse button. It translates switch 1 presses into left mouse button clicks. Many switch-accessible programs will require this setting. Some programs require a different setting. To change the settings:

- 1** Open the Mercury Control Panel. Click the **Setup** button, then click the **Switches** tab.
- 2** Use the program's documentation to choose the correct settings for either single- or dual-switch scanning. Note: when you click **OK** or **Apply**, your settings are saved.

Check your software documentation to determine if a keystroke is required for scanning.

 If you are using a switch with Discover:Switch® software, click the Discover button to use the Mercury switch input to activate Discover. Set Switch 1 to Discover for single-switch scanning in Discover. Set both Switch 1 and Switch 2 to Discover for dual-switch scanning in Discover.

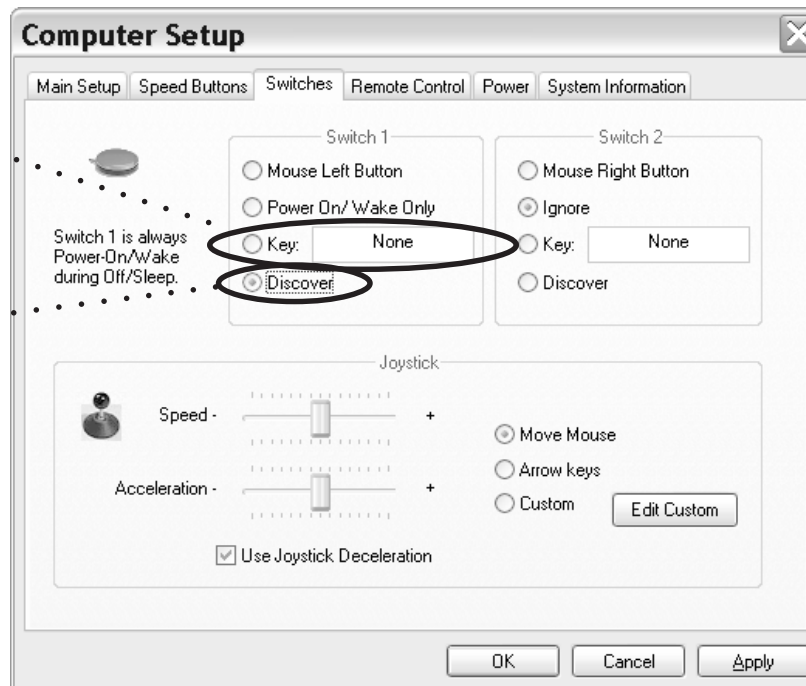


How do I set up MiniMerc to work with my wheelchair electronics?

If you are powering your MiniMerc with a wheelchair battery, install the MiniMerc wheelchair power cable (purchased separately from ATI) and make the power connections from the port on the wheelchair to the MiniMerc AC Adapter / Battery Charger port.

To use the wheelchair joystick as an input device with your MiniMerc, connect the larger 9-pin connector of the Wheelchair Joystick Cable (purchased separately from ATI) to your wheelchair ECU connector. Connect the smaller 8-pin connector to the MiniMerc wheelchair/joystick port.

When your joystick is in switch/communication mode (see the documentation for your wheelchair electronics), the joystick will move the mouse on the screen. If you want to add a switch to click the mouse button, connect a single switch to the Switch 1-2 jack on the MiniMerc or to the auxiliary switch input on the wheelchair ECU.

 The normal setting for *Joystick* is *Move Mouse*. Moving the joystick will start moving the mouse pointer slowly or quickly, depending on the acceleration setting, and speed up to the Speed Setting. A slower Acceleration Speed allows finer accuracy when moving short distances. Faster Speed and Acceleration allow quicker movement over longer distances (or across the display).

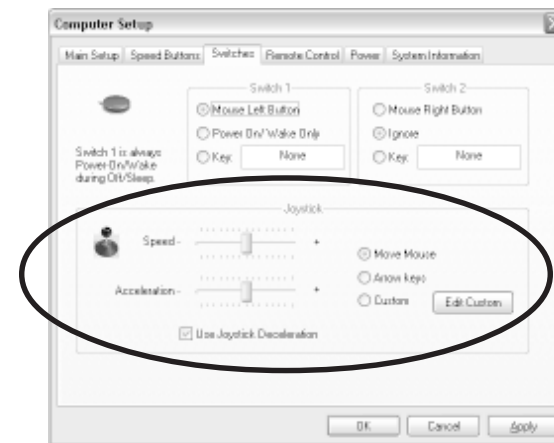


continued on the next page

If you want to change what your joystick does:

1 Open the Mercury Control Panel, click *Setup*, then click the *Edit Custom* button under *Joystick* on the *Switches* tab.

2 The *Custom Joystick Setup* window will appear. Choose the settings appropriate for you and the programs you use. (Select *Ignore* for unused directions.)

 Check your software documentation to determine which keystroke to enter here, if you want the joystick to send keystrokes.

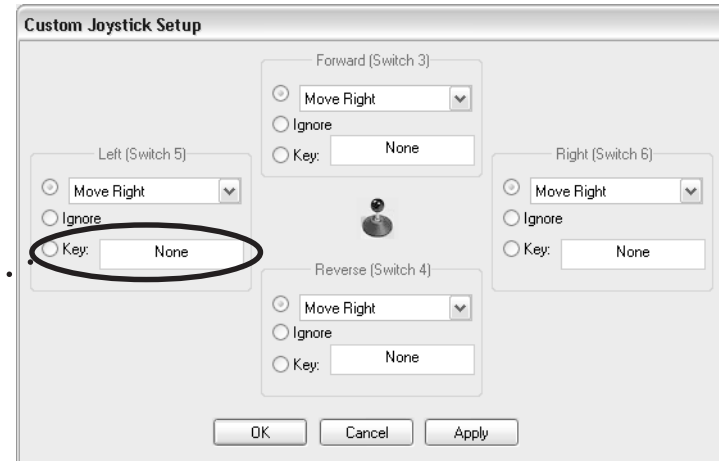

How do I use an alternative pointer with MiniMerc?

If you want to use an alternative pointer with MiniMerc, you will need a Windows-compatible USB mouse emulator such as the Tracker®Pro from Madentec Ltd. or the HeadMouse® Extreme from Origin Instruments.

An alternative pointer provides a way to point to an object, but not always a way to select it. This means that you will need a switch (hardware) or a dwell utility (software) to select an object. Check the documentation that came with your head pointing device for more information. If you will be selecting objects with a switch, you will need a momentary contact switch with a standard 1/8-inch plug. If you are not using a switch, use a dwell utility such as Dragger32™ from Origin Instruments, Magic Cursor 2000 from Madentec, or SmartClick from RJ Cooper & Associates. Call ATI at 1-800-793-9227 for product details.

What other devices work with MiniMerc?

The MiniMerc's USB ports let you plug in a range of devices without having to shut down and restart the MiniMerc. As you learned earlier in this User Guide, you plug your mouse into one of the USB ports on the side of MiniMerc.

You can add any one of the following devices:

- External drive (DVD, floppy, Zip™ or USB Flash Drive)
(Note: you can play DVDs on your external CD drive using the optional Cardbus Cable)
- USB IntelliKeys or other alternative keyboard
- Trackball
- Joystick
- Printer
- Digital camera
- Headmouse or Tracker
- CardBus modem, network, combo, or wireless card
- USB Ethernet adapter, for connecting to an Ethernet network
- USB wireless adapter, for connecting to a wireless network
- Multiple switch, such as those available from Tash, Inc. (requires ATI's wheelchair/joystick cable)

With a USB hub, you can connect more than two USB devices at the same time. To use a hub, plug the hub into one of the MiniMerc USB ports, then plug your other peripherals into the USB ports on the hub.

Some devices are powered by the USB port. Other devices have or require their own power (AC adapter). Follow the manufacturers' directions to set up and connect these devices. The USB port can manage up to 127 devices by attaching multiple hubs and hubs of different sizes.

If you want to connect MiniMerc to an Ethernet network, you will need an adapter. Recommended adapters that have been tested with MiniMerc are the LinkSys® EtherFast® Integrated CardBus PC Card (Model No. PCM200 ver. 2) and the Linksys® Wireless - B Notebook Adapter (Model No. WPC11 v. 4). Both are available from Assistive Technology, Inc. For more information on these products or using non-USB devices, call ATI at 1-800-793-9227.

 
How do I use headphones?

To listen to headphones privately (or anytime you want to turn off the built-in speakers), open the Mercury Control Panel. Turn down the Speaker volume (to 0) and set Headphone volume as desired.

The headphone preview feature is supported for Speaking Dynamically Pro software or any program that uses the left channel for previews and the right channel for the main voice. In the Mercury Control Panel, click *Setup*, then click *Enable* under Headphone Preview on the *Main Setup* tab.

To use the headphone previews with Speaking Dynamically Pro, open SDP's *Dynamic Boards* menu and choose *Speaker Volume*. Then under *Separation of Sounds* click *Left Channel* and *Right Channel*. Sounds played on the left channel will be heard on your headphones, and sounds played on the right channel will be heard from your MiniMerc speakers. To hear the previews, button clicks and button scan sounds on headphones only, under *Right Volume* set Preview Sounds, Button Click Sounds and Button Scan Sounds to *Mute*. Only *Normal Sounds* will then be heard from the MiniMerc speakers.

To set up headphone previews in SDP, add Recorded Preview actions to your buttons in your SDP boards. (Only Recorded Preview actions will be heard privately on your headphones. Spoken Preview actions will be heard from both headphones and speakers.) See the SDP manual or contact Mayer-Johnson LLC at 1-800-588-4548 if you require assistance with adding Recorded Preview actions.

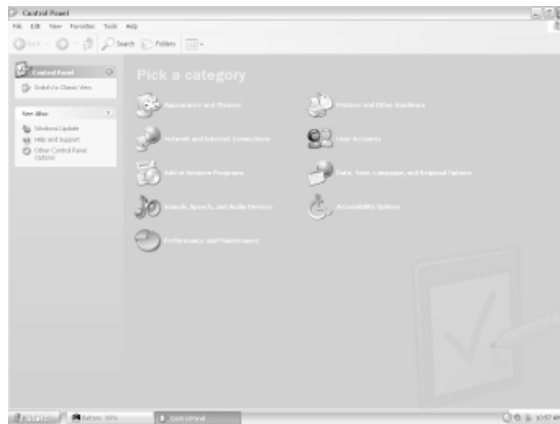

What is the Windows Control Panel?

At the *Windows Control Panel*, you can change other settings on your system, such as the date and time, display settings, and *Accessibility Options* (see the next page).

To open the Windows Control Panel, open the *Start* menu and click on *Control Panel*. Choose the category of the settings you wish to modify. At the next screen, choose the specific option.

How do I set up MiniMerc for accessibility?

 
Modifying features in the Windows Control Panel and other options can make MiniMerc easier to access for some users.

Display Control Panel


To enlarge the size of the text that appears on windows and menus, choose *Control Panel* from the *Start* menu. At the *Pick a Category* screen, choose *Appearance and Themes*. Then choose *Display* from the *Control Panel* icons near the bottom of the screen. Select the *Appearance* tab on the *Display Properties* window that appears. Choose *Extra Large Fonts* from the *Font size*: drop-down menu, then click *Apply*.



Start menu with default text size.

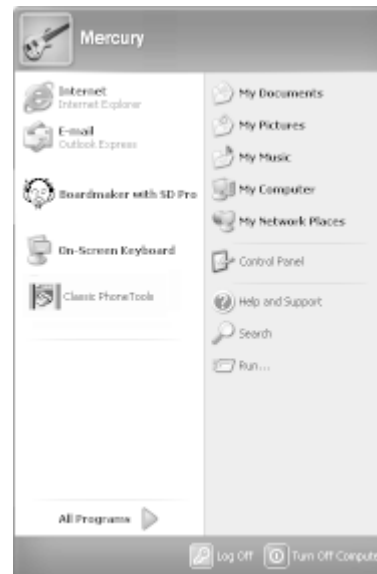

 Start menu with *Extra Large Fonts* selected.

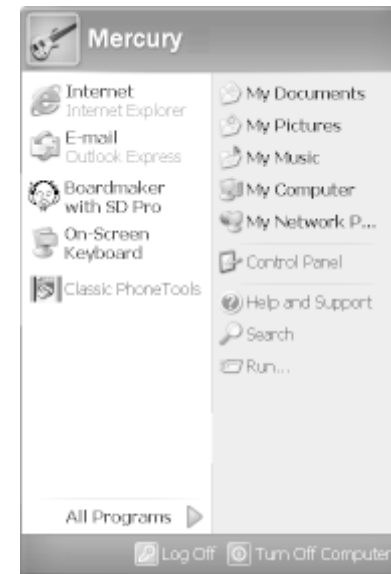

Accessibility Options Control Panel

 
For keyboard users:

At the *Start* menu, choose *Control Panel*. At the Pick a Category screen, choose *Accessibility Options*. Then choose the *Accessibility Options* Control Panel icon at the next screen. At this window you can turn on and off features such as StickyKeys, FilterKeys, and ToggleKeys.



Folder Options Control Panel

At the *Start* menu, choose *Control Panel*. At the Pick a Category screen, choose *Appearance and Themes*. Then choose the *Folder Options* Control Panel icon at the next screen. At this window you can choose to open items with a single click.

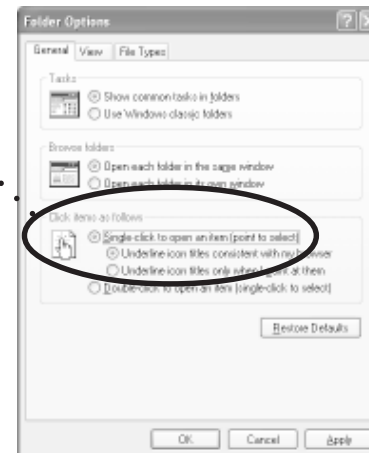

Other Accessibility Options

Other accessibility programs included with your MiniMerc are the *Magnifier* and *Narrator*.

To access *Magnifier*, a feature that enlarges the mouse or pointer's current location to make boxes and buttons easier to see, choose *All Programs* from the *Start* menu, then *Accessories*, then *Accessibility*, then *Magnifier*.

To access *Narrator*, a screen readback utility, choose *All Programs* from the *Start* menu, then *Accessories*, then *Accessibility*, then *Narrator*.

 
How do I adjust MiniMerc's power settings?

MiniMerc has several power settings that you can adjust. To view or change the settings, click the *Setup* button on the Mercury Control Panel, then click the Power tab.

Adjust the level at which MiniMerc warns you of a low battery or shuts down the MiniMerc.

Choose the suspend mode you prefer.

Choose which power buttons are available on the Mercury Control Panel main screen.

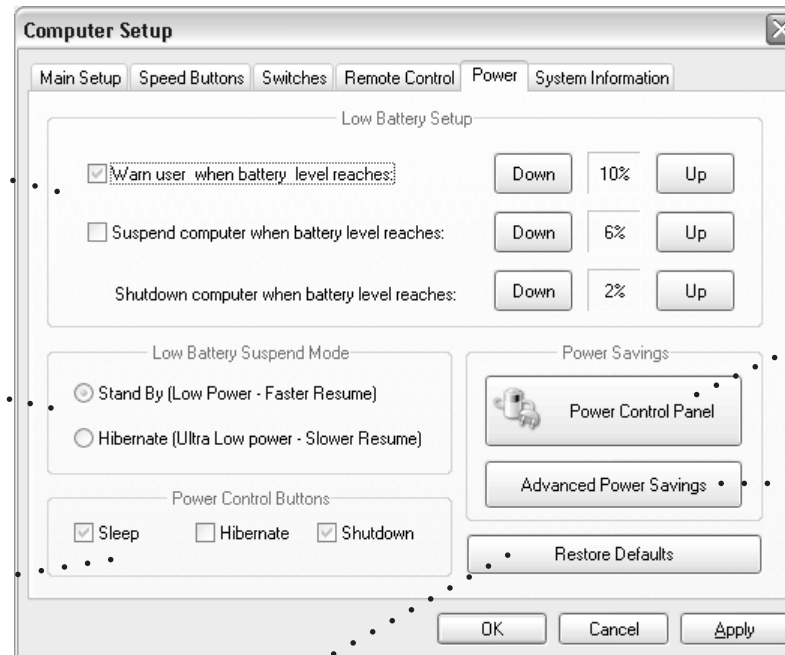

Restore the original Power settings.

Open the Windows Power Control Panel.

Optimize MiniMerc for economy (longer battery life) or performance (faster processing speed) with the Advanced Power Savings settings.

What do I need to know about the MiniMerc battery?

MiniMerc runs on a Lithium Ion battery with a charge that lasts approximately seven hours with average use. It recharges when plugged into its AC Power Adapter. The battery fully recharges in approximately four hours while plugged into the AC Power Adapter. Additional MiniMerc batteries as well as an optional external battery charger are sold separately by Assistive Technology, Inc.

To preserve the life of your battery, charge and discharge it frequently (daily, if possible). Leaving it in the MiniMerc with it always plugged in will shorten the battery's life. If the battery will not be used for a long period of time, store it below room temperature at less than a 50% charge. If you follow these guidelines, your battery should last for several years.

Warning: You will lose all unsaved data if you change the battery while MiniMerc is in Stand By mode and no power adapter is connected. Be sure to shut the system down or connect the AC power adapter before changing the battery.

 
To remove the battery:

Slide the spring latch toward the right.
Then pull the battery out from the bottom of the MiniMerc.

Handle the battery carefully.

Do not drop, puncture, mutilate, disassemble, or incinerate it.

Never get batteries wet.

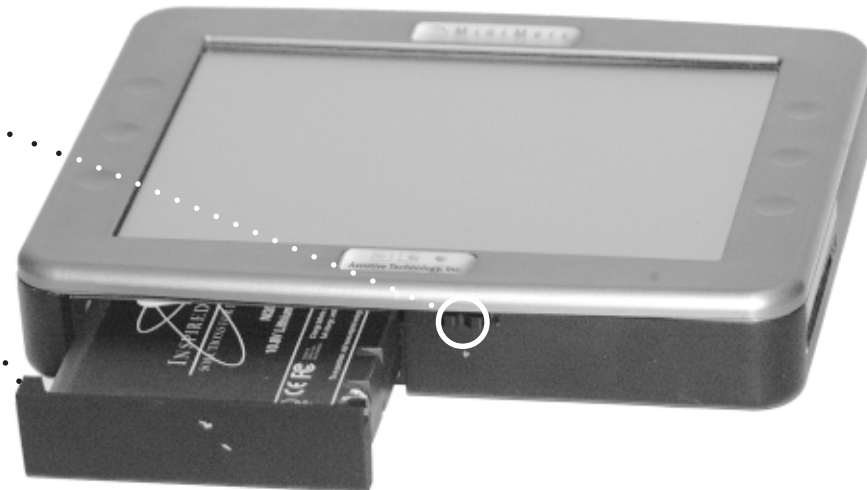

What if I have a problem?

If MiniMerc won't respond, the pointer won't move, or the display is dim:

Tap the screen. It may take a few seconds to respond.

If not, try to cancel what MiniMerc is doing:

- Press the <ctrl><alt><delete> keys simultaneously. Choose Task Manager and then click on the End Task button.
- If the MiniMerc does not respond, press the <ctrl><alt><delete> keys simultaneously and click on the Shutdown button in Task Manager.

If your MiniMerc still doesn't respond, restart it.

- Press and hold the Power button for five seconds to shut down the MiniMerc, then press the Power button again to restart it.

If the problem occurs when you use a certain program:

- Check with the program's manufacturer to see if it is compatible with MiniMerc.

If the problem occurs frequently, contact Technical Support at Assistive Technology, Inc. at 1-800-793-9227. **Note:** before calling ATI, find the MiniMerc's serial number, located on the sticker on the rear of the device. You will need to give the ATI Technical Support Representative this number when you call.

If MiniMerc won't turn on or start up:
Make sure the AC Power Adapter is plugged into MiniMerc and into a functioning power outlet.

- Check that the battery is installed properly and check the Mercury Control Panel to see if the battery is charged.

If MiniMerc does not start up properly:

Reset it.

- Remove the battery and disconnect the AC Power Adapter. Depress the Power button for several seconds. Then reconnect the AC Power Adapter and press the power button.

If that does not work, or if you hear a strange sound during startup:

- Contact Assistive Technology, Inc.

If your touchscreen does not respond after you turn on MiniMerc:

- Check that the touchscreen is not cracked, scratched or damaged, and that nothing is pressing on the touchscreen.
- If your mouse and keyboard work properly, check that the TSHARC driver is loaded. Restart MiniMerc by selecting *Turn Off Computer* from the *Start* menu and then choosing *Restart*.
- If this does not solve the problem, call ATI Technical Support.

If you have a problem connecting other devices:

- Make sure that the device is properly connected. Try unplugging and plugging in the device again.
- If the device requires its own power, check to see that its power supply is plugged in and turned on.
- Check to see if the device requires any software that needs to be installed.
- If that doesn't work, contact the device manufacturer.

If your switch input doesn't work:

- Make sure the Mercury Control Panel is running and is loaded at startup.
- If that doesn't work, restart MiniMerc.

If you have a problem with a software program:

- Contact the manufacturer of the software.

If you have other problems:

- Look at the information in Windows help for instructions and troubleshooting information.

If you have a problem with your Internet connection:

- Make sure your telephone or Ethernet line is connected and the line is working properly.
- Contact your Internet Service Provider.

How do I clean and care for MiniMerc?

For your own safety and to protect your MiniMerc, always disconnect the power plug (by pulling the plug, not the cord) and remove the battery if any of the following conditions exist:

- the power cord or plug becomes frayed or otherwise damaged
- you spill something into the case
- your MiniMerc is exposed to rain or any other excess moisture
- your MiniMerc has been dropped or the case has been otherwise damaged
- you suspect that your MiniMerc needs service or repair
- you want to clean the case

To clean the touchscreen:

Clean the touchscreen with a damp cloth.

To clean the case:

- 1** Disconnect the power plug and remove the battery. (Pull the plug, not the cord.)
- 2** Wipe the surfaces lightly with a clean, soft cloth dampened with water.

Warning

Do not use any substance that contains any strong chemicals. These can damage the touchscreen and case.

Electrical equipment may be hazardous if misused. Operation of this product, or similar products, must always be supervised by an adult. Do not allow children access to the interior of any electrical product and do not permit them to handle any cables.

Do not open MiniMerc. If you attempt to open your MiniMerc, any damage you cause to your equipment will not be covered by your MiniMerc warranty. Contact Assistive Technology, Inc. if you have other warranty-related questions.

Important

The only way to disconnect power completely is to both unplug the power cord and remove the battery. Make sure at least one end of the power cord is within easy reach so that you can unplug your MiniMerc when you need to.

Is there anything else I need to know?

Follow these instructions to use MiniMerc safely and wisely.

When setting up and using MiniMerc, remember the following:

- Read the installation instructions carefully before you plug MiniMerc into a wall socket.
 - Keep these instructions handy for reference by you and others.
 - Follow all instructions and warnings that appear on the MiniMerc screen.
 - Use only the power adapter that came with MiniMerc. Adapters for other electronic devices may look similar, but they can damage MiniMerc.
 - Always leave space around your MiniMerc power adapter. Make sure you use this equipment in a location where air is able to flow around the MiniMerc power adapter.
- Lithium Ion batteries contain hazardous chemicals and should not be thrown out with household trash. Check with local authorities for disposal.
 - When using MiniMerc or when charging the battery, it is normal for the bottom of the case to get warm. The bottom of the case functions as a cooling surface that transfers heat from inside the device to the cooler air outside. The bottom of the case is raised slightly to allow airflow that keeps the unit within normal operating temperatures.
 - Keep MiniMerc away from sources of liquids, such as drinks, bathtubs, or shower stalls. If you spill any food or liquid onto the MiniMerc, shut it down immediately, unplug it and remove the battery before cleaning it. Depending on what you spilled and how much got into MiniMerc, you may have to return it to ATI for cleaning and service.

- If you have a problem with your MiniMerc and nothing in the manual helps, call Assistive Technology, Inc. at 800-793-9227. Attempting to repair MiniMerc yourself will void your warranty.
- Do not move MiniMerc if you hear its hard disk spinning. When you put the MiniMerc in Stand By mode, wait until the screen is dark before moving it.
- Never force a connector into a port. Make sure the connector matches the port and that it is oriented properly. If the connector does not insert easily, they do not match.
- Do not use sharp or pointed objects on the touchscreen. Do not place heavy objects on the touchscreen. Excess weight can cause damage to the touchscreen and display.
- Use only the battery that came with MiniMerc. Batteries for other electronic devices may look similar, but they can damage it.

- If your MiniMerc has been in a cold place for several hours, let it warm up to room temperature before using it.
- Avoid leaving MiniMerc where temperatures may be extreme or unpredictable, for example, in the trunk of a car.
- Protect MiniMerc from dampness or wet weather, such as rain or snow.

Technical Information

Communications regulation information FCC declaration of conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and television interference

The equipment described in this manual generates, uses, and can radiate radio frequency energy. If it is not installed and used properly it may cause interference with radio and television reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of the FCC Rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your MiniMerc system is causing interference by turning it off. If the interference stops, it was probably caused by the MiniMerc or one of the peripheral devices.

If your MiniMerc system does cause interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the MiniMerc to one side or the other of the television or radio.
- Move the MiniMerc farther away from the television or radio.

- Plug the MiniMerc into an outlet that is on a different circuit from the television or radio. (That is, make certain the MiniMerc and the television or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary consult Assistive Technology, Inc. See the service and support information that came with MiniMerc.

Changes or modifications to this product not authorized by ATI could void the FCC Certification and negate your authority to operate the product.

Important This product was tested for FCC compliance under conditions that included the use of ATI-approved peripheral devices and shielded cables and connectors between system components. It is important that you use ATI-approved peripheral devices and shielded cables and connectors between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices. You can obtain ATI-approved peripheral devices and proper shielded cables and connectors from ATI.

Responsible party (for FCC matters): Assistive Technology, Inc.

Industry Canada statement

This Class B device meets all requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la Class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Europe—EU Declaration of Conformity

This device complies with requirements of the European Directives 89/336/EEC (for IT devices) and 93/42/EEC (for medical devices).

